Extractor Fan Instructions

Control Box Wiring

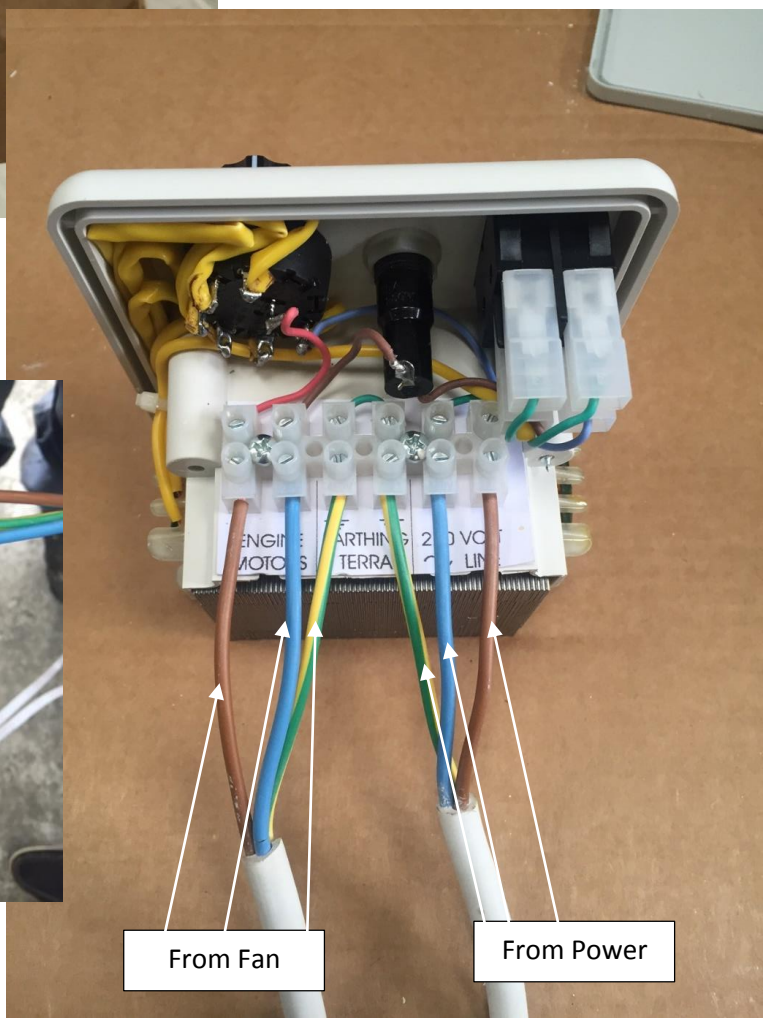

Junction Box Wiring

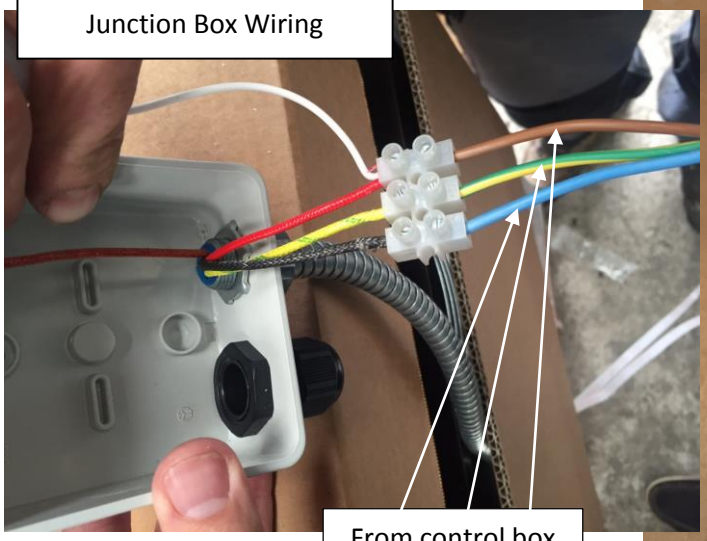

(1) Fan fitting
    - Take the fan out of the box and set it onto the top section oh chimney. Drill three small holes evenly spaced around the rim of the chimney and use three self-tapping screws to secure it to the fan.
    - Put fan and chimney on shoulder and walk up the ladder to the chimney box.
    - Drop the chimney down through the hole in the chimney box and drop it into the lower section of chimney.
    - Screw the fan onto the top hat through the holes in the fan phalange.

(2) Control Box
    - Screw the control box to the wall in your preferred position. We would generally screw them just inside the door on the left or right hand wall so they are easily accessible.
    - Reference control box wiring picture above to see correct position for each wire.
    - Having wired this, run the wire up one of the roof supports to the top hat where you will thread it through a hole you will drill.

(3) Junction Box
    - The junction box is screwed to the back of the hexagonal top hat.
    - Drill a hole through the back of the top hat, only just large enough for the wrapped fan wiring exiting the junction box to fit through.
    - Take the wiring up through the hole from inside the cabin and wire the junction box according to the junction box picture above.
    - Once you are satisfied that the junction box is secure and the wiring correct; seal the hole silicone.